PORTABLE SHELTER INSTRUCTIONS

MODEL: SH-5M-600

W6 xL6 x H 1.9 m





TURE MAY NOT REFLECT THE EXACT MODEL

TO OUR NEW AND VALUED CUSTOMER

Thank you for purchasing your new Instant Shelter. We knowyou will have as much pleasure owning your new shelter as we had in makingit for you. Our shelters have been designed for rapid assembly and minimalmaintenance. We have rigorous quality control at every step of the sheltersmanufacturing process to insure you the best unit money can buy. Our partsare triple checked prior to packaging to insure you will have everything youneed before you start. In the unlikely event that a part is damaged or missing, you should immediately contact your place of purchase for a speedyreplacement.

Qingdao Shenghe

And Now a Few Words About Safety

HEAD PROTECTION IS RECOMMENDED!

Working with or under heavy parts included with this shelter can causeserious head injury.

WEAR GLOVES

You will be working with metal parts which may have SHARP edges

CHECK WITH YOUR LOCAL AUTHORITIES

Underground POWER CABLES or GAS LINES may result in injury whilesecuring the shelter. It may also result in having to move the building. Acursory check with the local building authorities will help alleviate theseconcerns.

CLIMBING EQUIPMENT

It is highly recommended that scaffolding, ladders and mechanicallifting equipment conform to all local building codes when erecting theshelter. Safety straps and harnesses should be used at all times. Themetal structure of the shelter has not been designed for human weight. Erecting shelter during wind or rain is unsafe and could

CHECK LOCAL WEATHER CONDITIONS

Check your local weather forecast prior to planning your building day. Wind, snow and/or rain may cause unsafe conditions that could lead toserious injury.

STORING HAZARDOUS MATERIALS

Check all local building codes prior to storing any hazardous material. Shelter may require additional ventilation to meet local codes.

SEVERE WEATHER CONDITIONS

Working in and around the portable shelter during severe weather is notrecommended. Serious injury could result. In the event that extraordinarily severe wind, snow or other severe conditions are predicted and if time permits, it is recommended that the shelter coverbe removed.

PREVENT ENTRAPMENT

Check Shelter for co workers before locking up. Always provide forescape in case of

SHELTER RELOCATION

Should the shelter require relocation or disassembly for any reason, it isstrongly recommended that the structure and its cover are thoroughlyinspected prior to rebuilding

PERIODIC SHELTER INSPECTION

As with all structures, periodic inspection of the cover and all structural components is highly recommended. Tightening the cover and the structure will prolong the life of your investment

PLEASE BE SafetyCONSCIOUS!

Common Sense is the knack of seeing things as they are, and doing things as theyought to be done. Harriet Beecher Stowe

THANK YOU FOR CHOOSING OUR SHELTER


UNPACKING & IDENTIFYING PARTS

Prior to assembling your New Portable Shelter, unpack all crates and complete an inventory of all parts according to the following list and diagrams


PARTS LIST FOR SH-5M-600

Parts#	Descriptions	Diagram	Dimensions (in mm)	Q'TY
1	Curved Rafter (side crest)	60	Ø 45x1600	10
2	Roof Rafter	(<u>•</u>) • •) •	Ø 45x1550	8
2-1	Roof Rafter	(0) 00 0	Ø 45x1550	2
3	Top crest(Peak)	0 0	Ø 45x1750	5
4	Purlin	>	Ø 38x1437	16
5	Purlin with ring		Ø 38x1437	4
6	bracing cable		Ø 6x4100	16
7	Base Rail Parts		25x50x2000	2
8	Base Rail Parts	1. 201 Des.	25x50x2000	2
9	Base Rail Parts		25x50x2000	2
10	Angle iron(to fix base rail on container)		120x90x59x4	8
11	Fixing steel plate			10
12	Ratchet Tie-Down(end)			4
13	Ratchet Tie-Down			8
14	Screws, washer and Nuts	()	M8x75	92
15	Screws, washer and Nuts	()	M8x15	16
16	Screws, washer and Nuts	()—>>>>>> () (©	M12x100	16
17	Cover Conduit		Ø 25x1510	2
18	Cover Conduit with swaged end		Ø 25x1510	6
19	Strap band(for ratchet)		25x700	8
20	Cover lock-up ratchet		T-2	28
21	Roof Cover			1


SH-5M-600 Main Dimension(mm)

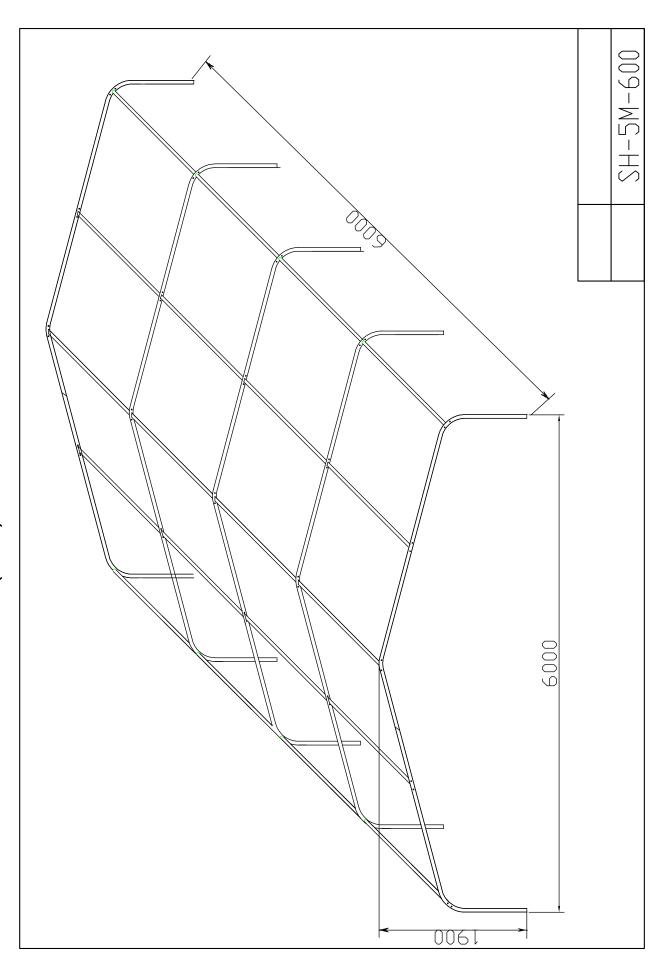


SH-5M-600 L6x W6 x H1.9m FRAME DIAGRAME

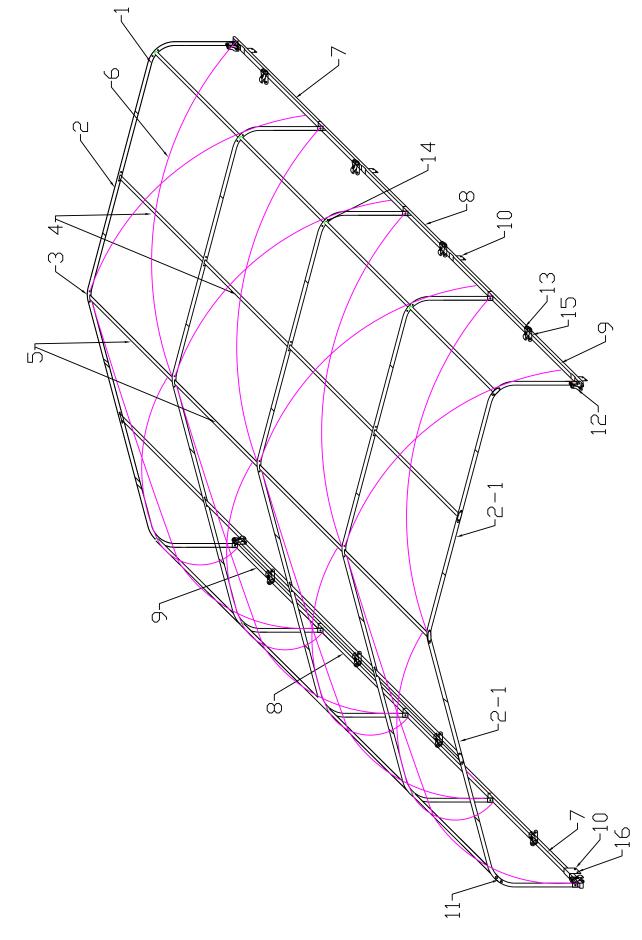


Step A: Place the base rail parts on a chosen place as shown below, and connect the parts.

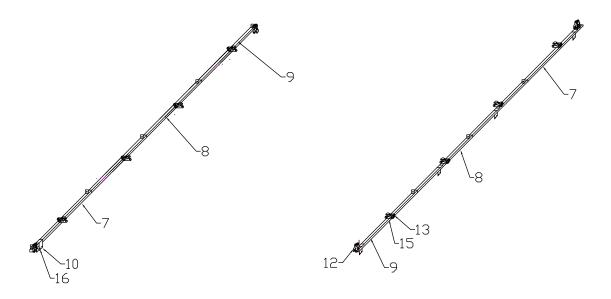


Step B: Assemble the top crest(3), roof rafter(2) and curved rafter(1), and insert into the base rail. See below.

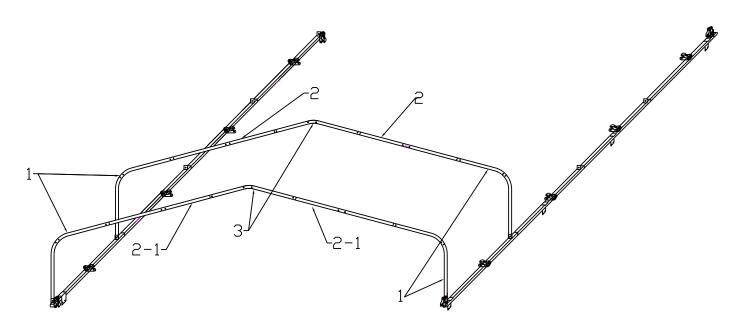


Step C: Install the purlin(4)or(5) as shown below. (use the screws and nuts where necessary)

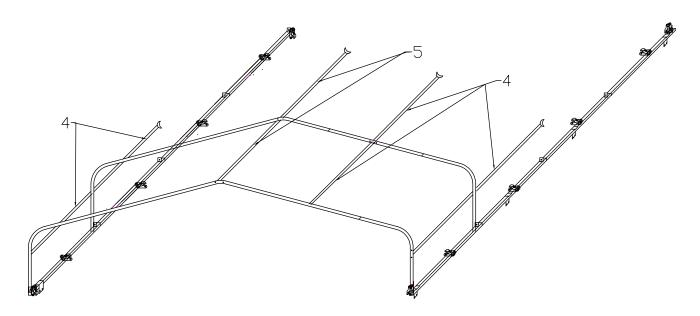


Step D: Do the same step B and C to the other rows, brace with bracing wire cable.

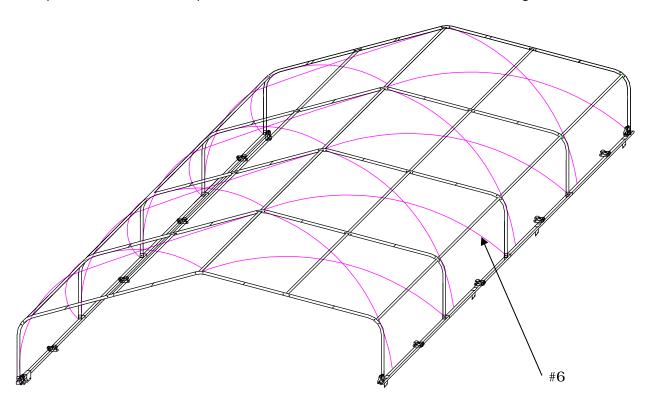


Step E: Put on the roof cover(21) as shown below.

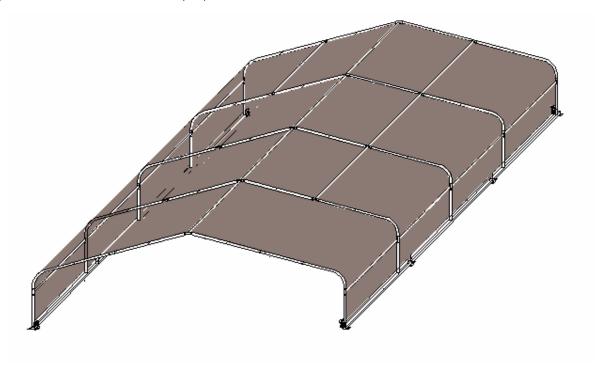

TIPS: Slide the roof cover over assembled frame from one side and insert the conduit to pocket on side:

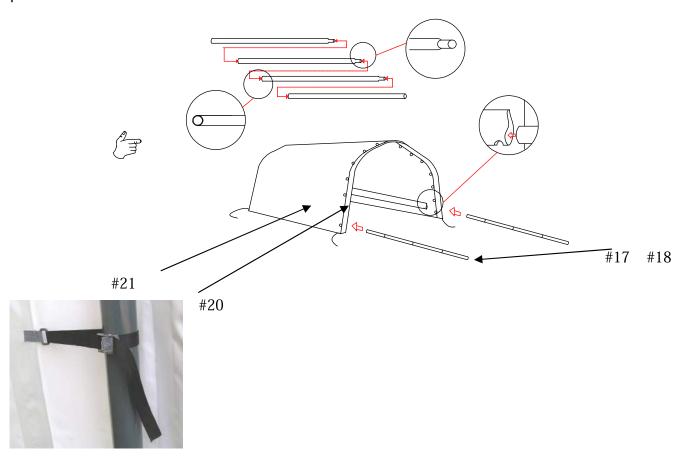

Pocket for side wall conduit

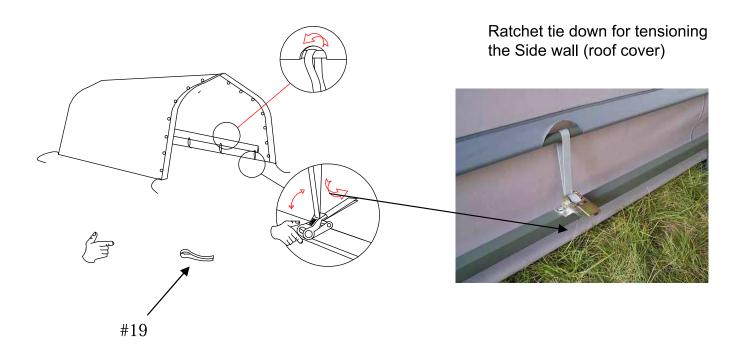

Step F: Fix the shelter to container top edge with angle iron and screws.

