PORTABLE SHELTER INSTRUCTIONS

MODEL: SH-9M-600

W6 xL12x H 1.9 m





TURE MAY NOT REFLECT THE EXACT MODEL

TO OUR NEW AND VALUED CUSTOMER

Thank you for purchasing your new Instant Shelter. We knowyou will have as much pleasure owning your new shelter as we had in makingit for you. Our shelters have been designed for rapid assembly and minimalmaintenance. We have rigorous quality control at every step of the sheltersmanufacturing process to insure you the best unit money can buy. Our partsare triple checked prior to packaging to insure you will have everything youneed before you start. In the unlikely event that a part is damaged or missing, you should immediately contact your place of purchase for a speedyreplacement.

And Now a Few Words About Safety

HEAD PROTECTION IS RECOMMENDED!

Working with or under heavy parts included with this shelter can causeserious head injury.

WEAR GLOVES

Qingdao Shenghe

You will be working with metal parts which may have SHARP edges

CHECK WITH YOUR LOCAL AUTHORITIES

Underground POWER CABLES or GAS LINES may result in injury whilesecuring the shelter. It may also result in having to move the building. Acursory check with the local building authorities will help alleviate these concerns.

CLIMBING EQUIPMENT

It is highly recommended that scaffolding, ladders and mechanicallifting equipment conform to all local building codes when erecting theshelter. Safety straps and harnesses should be used at all times. Themetal structure of the shelter has not been designed for human weight. Erecting shelter during wind or rain is unsafe and could result in seriousinjury.

CHECK LOCAL WEATHER CONDITIONS

Check your local weather forecast prior to planning your building day. Wind, snow and/or rain may cause unsafe conditions that could lead toserious injury.

STORING HAZARDOUS MATERIALS

Check all local building codes prior to storing any hazardous material. Shelter may require additional ventilation to meet local codes.

SEVERE WEATHER CONDITIONS

Working in and around the portable shelter during severe weather is notrecommended. Serious injury could result. In the event that extraordinarily severe wind, snow or other severe conditions are predicted and if time permits, it is recommended that the shelter coverbe removed.

PREVENT ENTRAPMENT

Check Shelter for co workers before locking up. Always provide forescape in case of emergency.

SHELTER RELOCATION

Should the shelter require relocation or disassembly for any reason, it isstrongly recommended that the structure and its cover are thoroughlyinspected prior to rebuilding

PERIODIC SHELTER INSPECTION

As with all structures, periodic inspection of the cover and all structuralcomponents is highly recommended. Tightening the cover and thestructure will prolong the life of your investment

PLEASE BE SafetyCONSCIOUS!

Common Sense is the knack of seeing things as they are, and doing things as theyought to be done. Harriet Beecher Stowe


THANK YOU FOR CHOOSING OUR SHELTER

UNPACKING & IDENTIFYING PARTS


Prior to assembling your New Portable Shelter, unpack all crates and complete an inventory of all parts according to the following list and diagrams

parts#	Descriptions	Diagram	Dimensions(mm)	Qty
1	Curved rafter (side crest)	000000000000000000000000000000000000000	Ф45х1600	18
2	Roof Rafter	(°) ••)•	Ф45х1550	16
3	Roof Rafter(back end)	(0)).	Ф45х1550	2
4	Top crest(Peak)	000000	Ф45х1750	9
5	Purlin	0	Ф38х1447	32
6	Purlin with ring		Ф38х1447	8
7	BBrraacciinngg ccaabbllee		Ф6х4100	32
8	Base Rail Parts		25x50x1574	2
9	Base Rail Parts		25x50x1489	12
10	Base Rail Parts		25x50x1489	2
11	Angle iron(to fix base rail on container)		120x90x59x4	16
12	Fixer(end)	00	Ф45/4х45х100	10
13	Ratchet Tie-Down(end)		3x75x95	4
14	Ratchet Tie-Down		3x30x75	16
15	Screws kits	() 	M8x70	166
16	Screws for (Ratchet Tie-Down)	()	M8x15	32
17	Screws kits	()————————————————————————————————————	M12x100	32
18	Cover Conduit	0	Ф28х1530	2
19	Cover Conduit with swaged end	<u></u>	Ф28х1530	14
20	Strap band(for ratchet)		25x700	16
21	Cover lock-up Ratchet	(Character)	T-2	28
22	Main Cover			1


SH-9M-600 Main Dimension(mm)

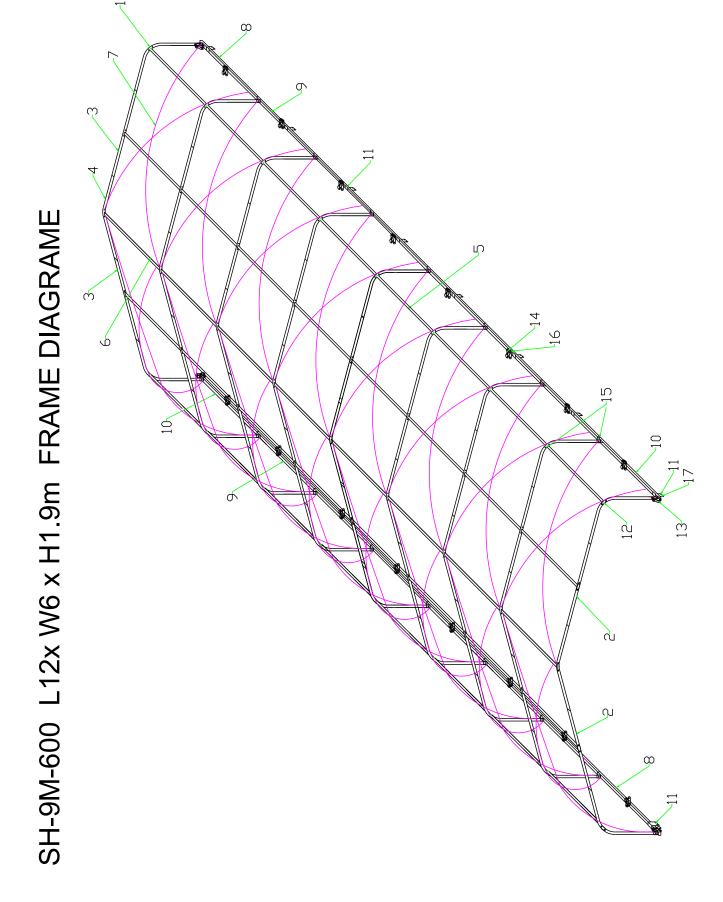


Step 1: Place the base rail parts on a chosen place as shown below, and connect the parts.

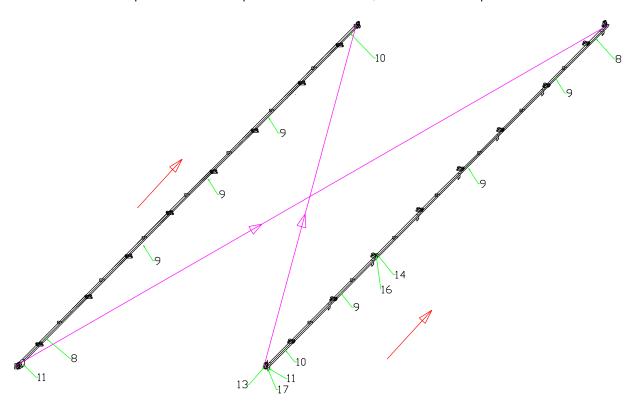


Step 2: Connect the top crest(4), rafter(2) and curved tube of side rafter(1), and insert into the base rail. See below.

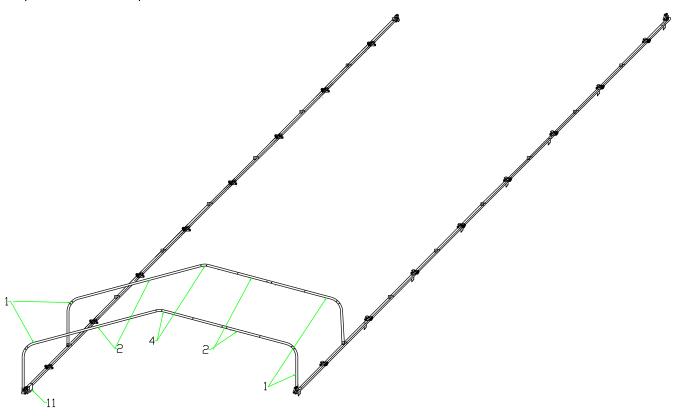

Step 3: Install the purlin(5)or (6) as shown below. (use the screws and nuts where necessary)

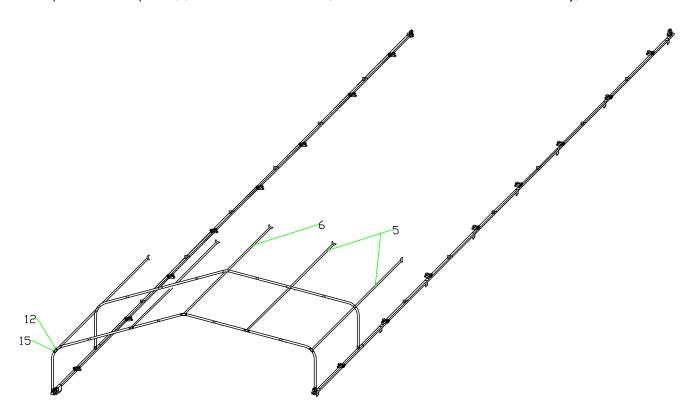

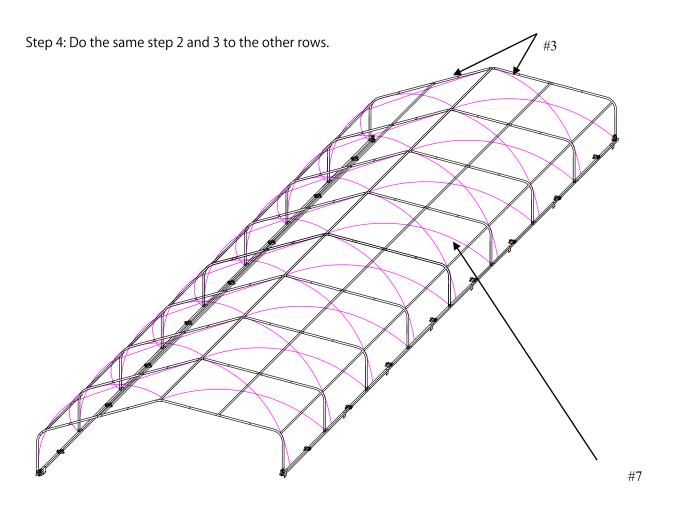

TIPS: Slide the roof cover over assembled frame from one side and insert the conduit to pocket on side

