FABRIC BUILDING INSTRUCTIONS

MODEL: SH-RO254015

L12.2 x W7.6 x H 4.6



PICTURE MAY NOT REFLECT THE EXACT MODEL

TO OUR NEW AND VALUED CUSTOMER

Thank you for purchasing your new Instant Shelter. We know you will have as much pleasure owning your new shelter as we had in making it for you. Our shelters have been designed for rapid assembly and minimal maintenance. We have rigorous quality control at every step of the shelters manufacturing process to insure you the best unit money can buy. Our parts are triple checked prior to packaging to insure you will have everything you need before you start. In the unlikely event that a part is damaged or missing, you should immediately contact your place of purchase for a speedy replacement.

About Safety



Working with or under heavy parts included with this shelter can cause serious head injury.

WEAR GLOVES

You will be working with metal parts which may have SHARP edges

CHECK WITH YOUR LOCAL AUTHORITIES

Underground POWER CABLES or GAS LINES may result in injury while securing the shelter. It may also result in having to move the building. A cursory check with the local building authorities will help alleviate these concerns.

CLIMBING EQUIPMENT

It is highly recommended that scaffolding, ladders and mechanical lifting equipment conform to all local building codes when erecting the shelter. Safety straps and harnesses should be used at all times. The metal structure of the shelter has not been designed for human weight. Erecting shelter during wind or rain is unsafe and could result in serious injury.

CHECK LOCAL WEATHER CONDITIONS

Check your local weather forecast prior to planning your building day. Wind, snow and/or rain may cause unsafe conditions that could lead to serious injury.

STORING HAZARDOUS MATERIALS

Check all local building codes prior to storing any hazardous material. Shelter may require additional ventilation to meet local codes.

SEVERE WEATHER CONDITIONS

Working in and around the portable shelter during severe weather is not recommended. Serious injury could result. In the event that extraordinarily severe wind, snow or other severe conditions are predicted and if time permits, it is recommended that the shelter cover be removed.

PREVENT ENTRAPMENT

Check Shelter for co workers before locking up. Always provide for escape in case of emergency.

SHELTER RELOCATION

Should the shelter require relocation or disassembly for any reason, it is strongly recommended that the structure and its cover are thoroughly inspected prior to rebuilding.

PERIODIC SHELTER INSPECTION

As with all structures, periodic inspection of the cover and all structural-components is highly recommended. Tightening the cover and the structure will prolong the life of your investment.

PLEASE BE Safety CONSCIOUS!

Common Sense is the knack of seeing things as they are, and doing things as they ought to be done.

THANK YOU FOR CHOOSING OUR SHELTER


UNPACKING & IDENTIFYING PARTS

Prior to assembling your New Portable Shelter, unpack all crates and complete an inventory of all parts according to the following list and diagrams


Parts#	Descriptions	Diagram	Dimensions (mm)	Q'TY	BOX
1	Top roof arched rafter(left)	do do	Ф 60х2000	8	1
2	Roof arched rafter	e de la composition della comp	Ф 60х2000	20	1
3	Lower Roof arched rafter(end)	Ba ela	Ф 60х2000	4	1
4	Side upper curved rafter	000	Ф 60х1155	16	1
5	Side vertical rafter(leg)	(Ф60х1800	16	4
6	Door frame vertical tube(lower)	(i) · O ·)	Ф60х1800	4	4
7	Door framevertical tube(upper)	0	Ф60х1980	4	4
8	Upper door cross tube(left/right)		Ф60х1800	4	4
9	Upper door cross tube(mid)	(o) o o o	Ф60х1400	2	4
10	Side door frame cross support tube	() • • •	Ф 45х1025	4	4
11	Top and side roof purlin		Ф 45х1680	21	2
12	Purlin	D	Ф 45х1680	28	2
13	Upper door vertical support		Ф 60х980	2	1
14	Door frame base rail	89 0 . 3	90x30x1240	4	3
15	Side base rail	0.000	90x30x1734	12	3
16	Side base rail	0.0 0.0.	90x30x1834	2	3
17	Upper door vertical support connector		Φ60	2	3
18	Door sliding cable support hook			2	3

	Ι				T
Parts#	Descriptions	Diagram	Dimensions (mm)	Q'TY	ВОХ
19	Cover conduit		Ф32х1760	2	4
20	Cover conduit		Ф32х1760	12	4
21	Zipper tool(open/close)	<u> </u>	Ф16х1800	1	4
22	Fixer (for door frame)		Φ60	34	3
23	Door sliding cableS:18pcs	ф— <u>Ф→ · · · · · · · · · · · · · · · · · · ·</u>	Ф 6х5000	2	3
24	Roof bracing cable kit		Ф 6х4280	28	1
25	Side wall bracing cable kit		Ф 6х2990	28	1
26	Single way clamp	0 0)		16	3
27	Anchor		M16x450	32	3
28	Screw, washer and nut		M8x80	190	3
29	Screw and washer for door frame and door base rail	() ()	M8x80	8	3
30	Screw, washer and nut		M8x120	12	3
31	Screws for door base	(<u>)</u>	M8x120	4	3
32	Screw, washer and nut for ratchet		M8x15	28	3
33	Ratchet tie-down			14	3
34	Door bracing cable kit		Ф 6х5900	4	3
35	Wind bracing strap	y y		3	1
36	Base (for #35)	<u></u>		6	1
37	Wedge anchor(for#36)		M12x120	12	3
	•				


Parts#	Descriptions	Diagram	Dimensions (mm)	Q'TY	BOX
38	Strap band(for ratchet)			14	3
39	Cover lock-up		T-2	52	3
40	Ball type bungee		Ф5х380	80	3
41	Main Cover			1	4
42	Door cover			2	4
43	Upper cover	800000		2	4
44	Wrench	€== €	13-16	2	3

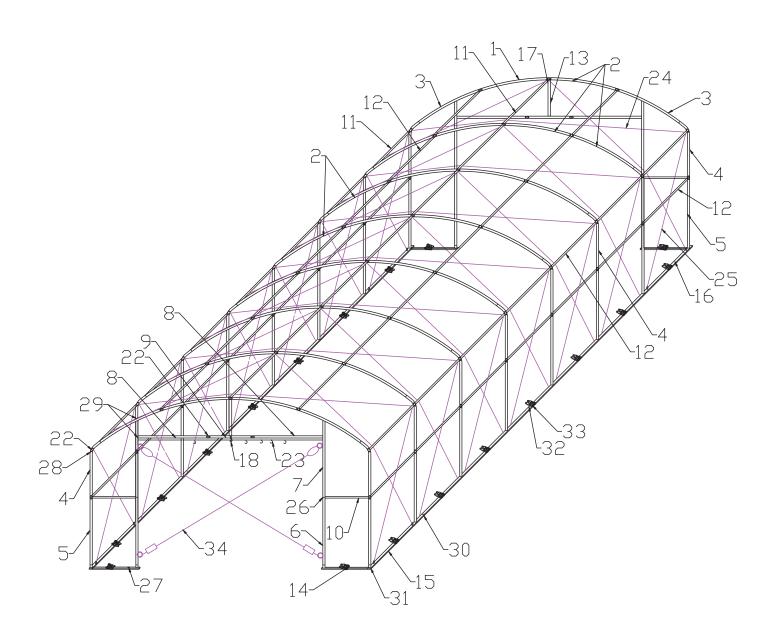

SH-RO254015 Main Dimension(mm)

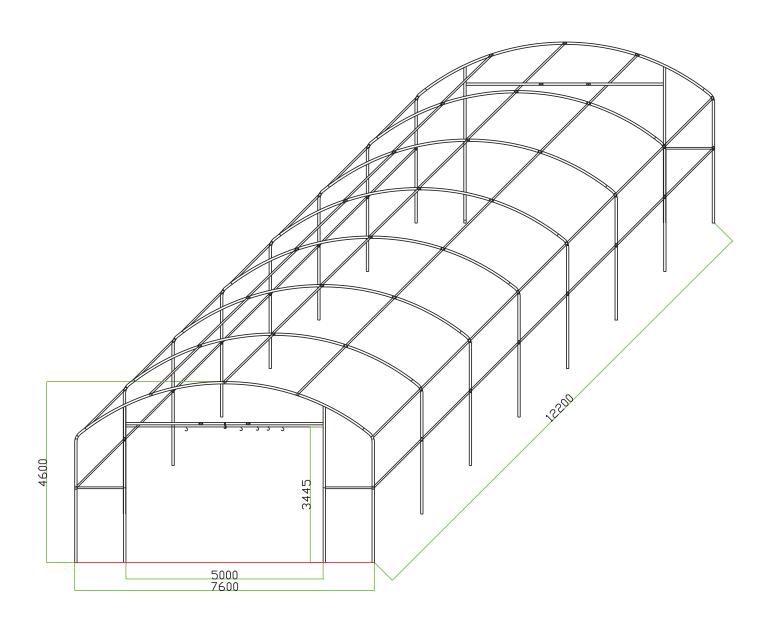


Base drawing

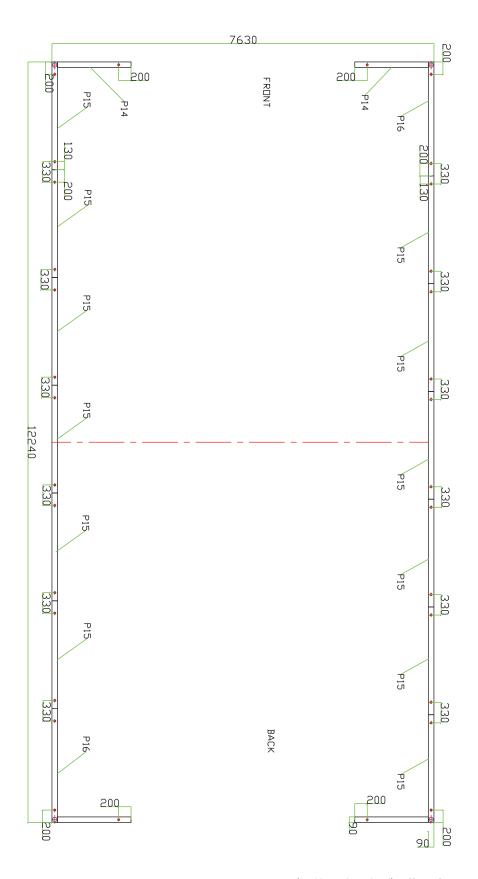


※サイズは約です。必ず現物で合わせてください。

Frame Assembly Steps


Step 1: Measure the ground according to above drawing, place and connect the base rails parts#14,#15,#16,fix to ground with #27,install the ratchets on. (put the anchors in concrete before installation, install the shelters after concrete concreted)

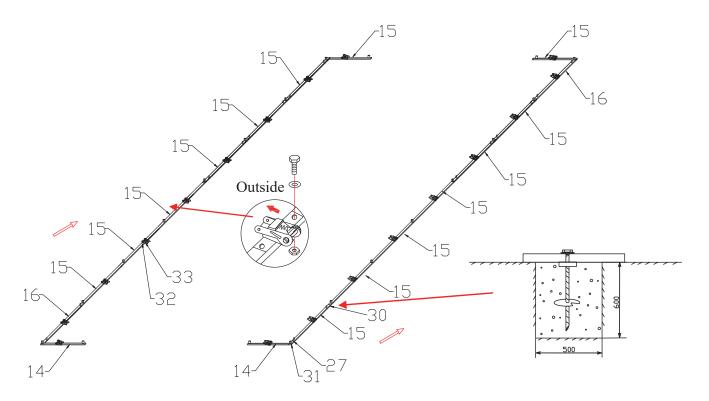


Step 2: Install the end rafter with #1,#2 and #3,#4,#5,crane/lift it into base feet. (To avoid accident, It is very important to hold the first row of rafter with support (wood, rope or similar stuffs), make sure that it won't fall down.)

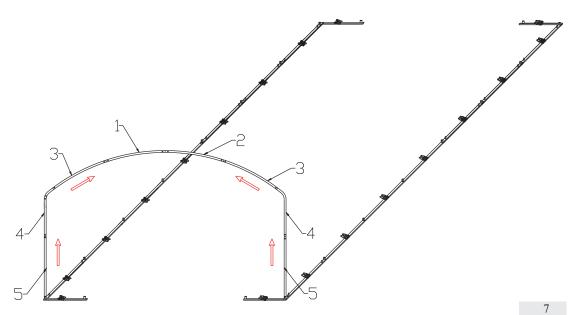

Step3 :Install the second row of rafter with #1,#2 and #4,#5, crane/lift it into base fee, then connect to the first row with #11,#12, and brace with #24,#25.

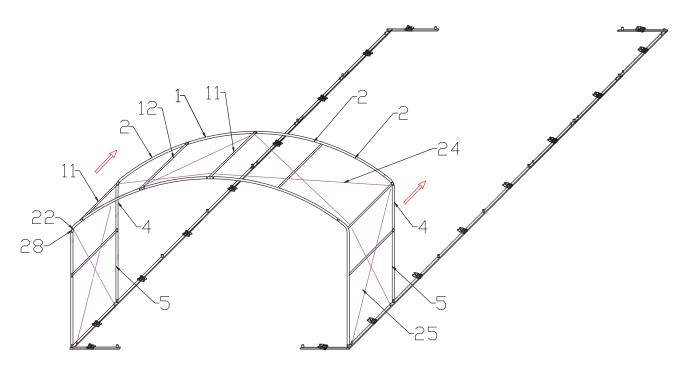


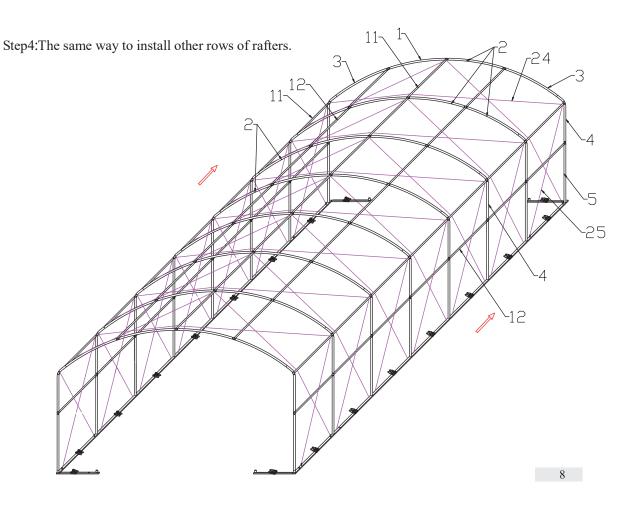

17 13 8 29 18 23 7 26 10 10


Step 5: Install the door frames as shown below, and fasten all the screws and parts again.

Tips: The tools below may needed while installing the shelter.

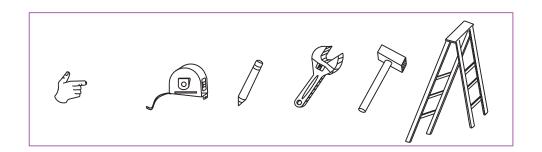



Cover Installation

TIPS: Slide the roof cover over assembled frame from one side

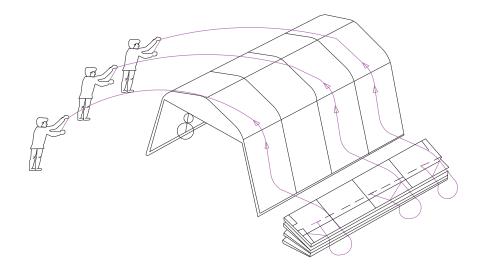


insert the conduit to pocket on side:

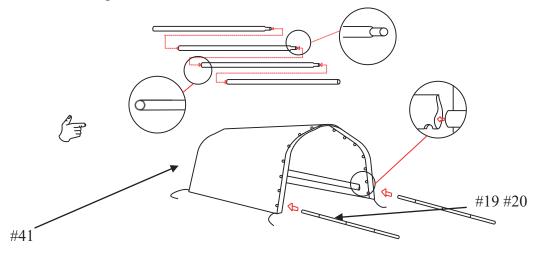

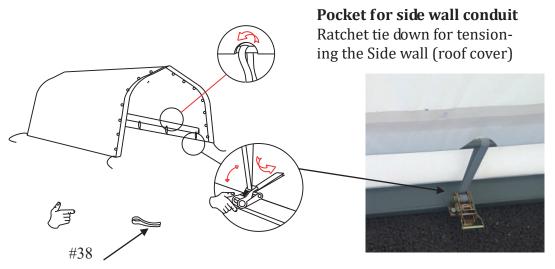


Step 2 : Attach the cover to the frame as following :

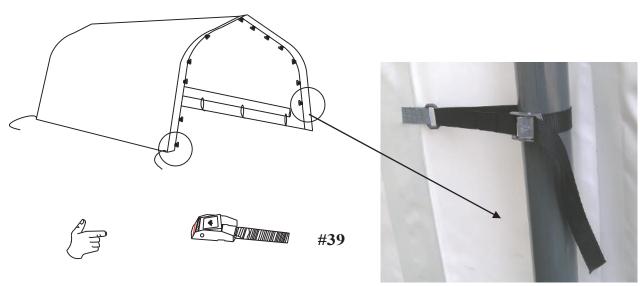


Note:#39 for main roof cover tensioning. #38 for front and end covers tensioning.

Your assembled shelter will be similar to the illustration as below:

Illustration for Ratchet

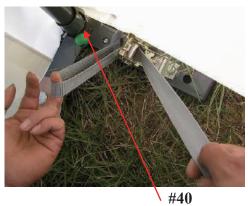



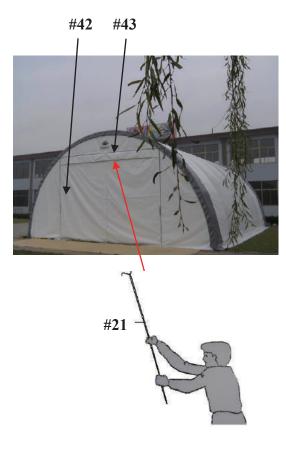

(in order to protect the shelter from heavy wind, please install the wind bracing straps at points 300 mm measuring from the ends, and others to be installed in the middle averagely.) (photos are for reference only, the real quantity is according to packing list.)

